


TQWT for Mark audio CHP-70

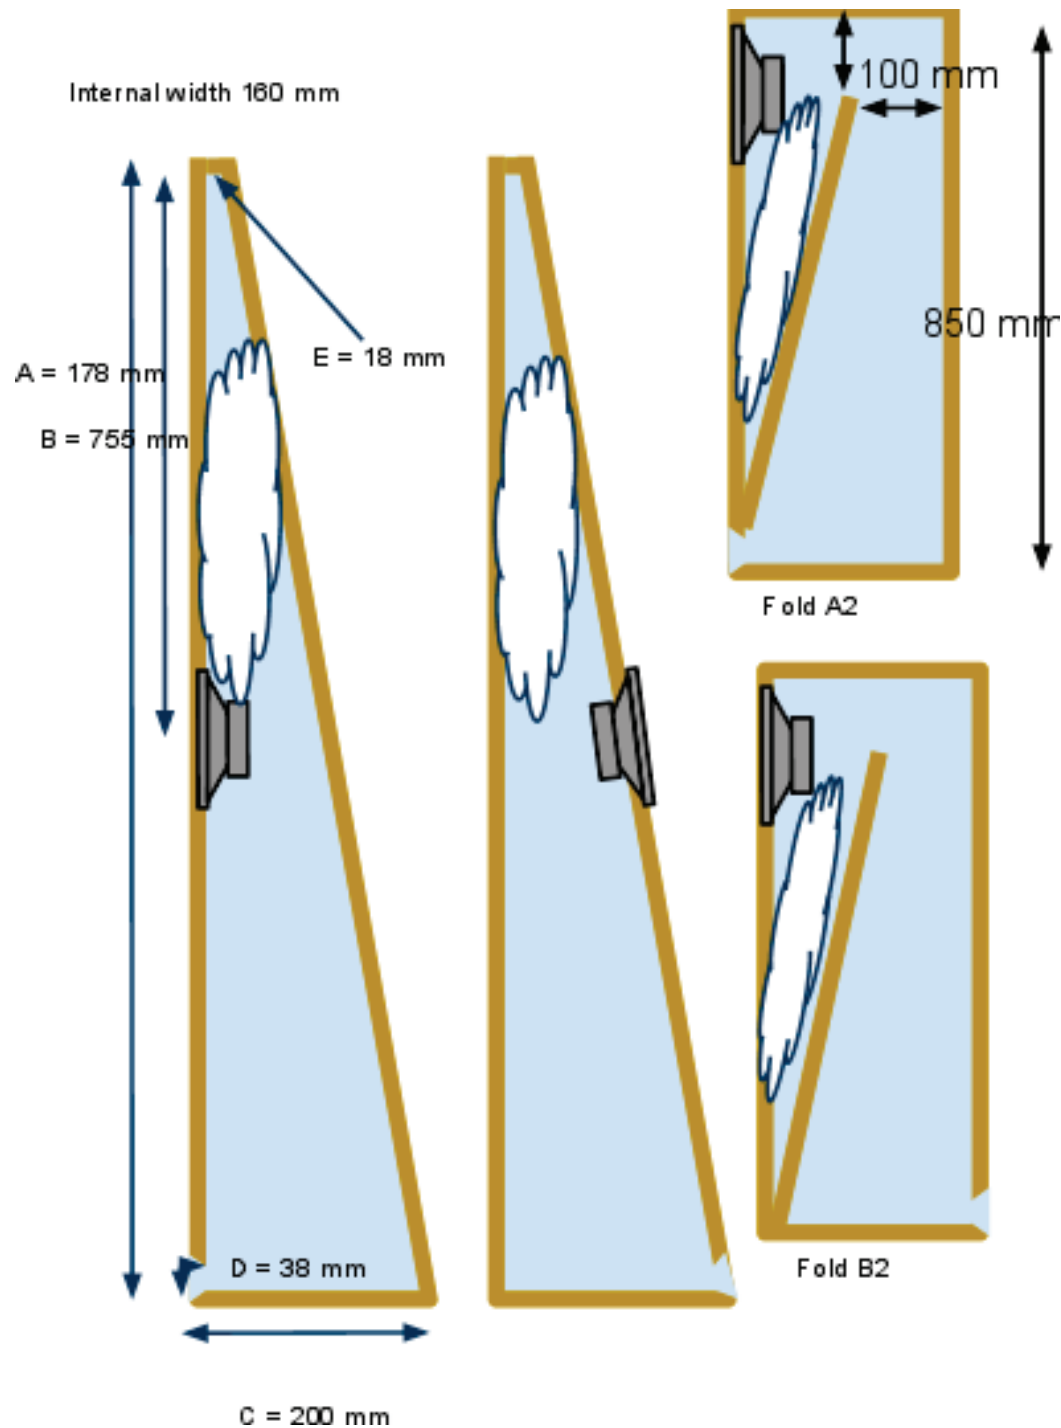

- Damping in the throat of the horn, poly fluff or wool, lightly stuffed.
- Walls covered around speaker unit to prevent reflexes, with thin felt
- Backfiring port should not be backed up against wall, but will give more bass, when partially backed into a corner
- Backfiring port is better if listening close up to the speaker, as any mid-range coming out of vent does not disturb directional sound
- If too much bass stuff bit harder
- If mid-range from vent is disturbing add some damping just below speaker
- Reducing vent size a little will give a few Hz extra bass depth